


INSTRUCTIONS

1" View Binder

No Tools Required

- 1.) Lay the **binder flat** open on a flat, solid surface
- 2.) Insert two **snap-rivets** through holes in spine from the back of the binder
- 3.) Place **ring mechanism** on the inside spine over the protruding rivets
- 4.) Press mechanism down firmly to engage snap rivets

Parts

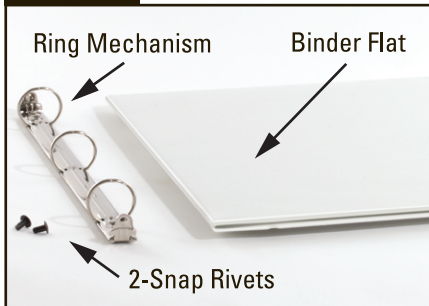

Assembly

